



BOSCH

Register your
new device on
MyBosch now and
get free benefits:
**[bosch-home.com/
welcome](https://bosch-home.com/welcome)**




Hob

PKB6..F17., PKN6..F17., PKF65.F17., PKF76.F17.


[en] Instruction manual

Hob

PKB6..F17.

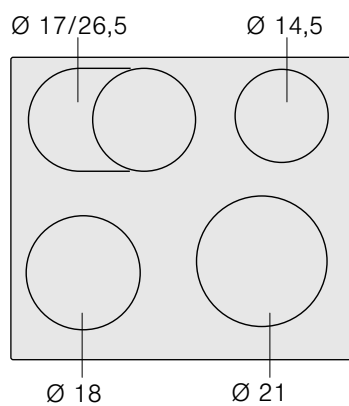

PKN6..F17.

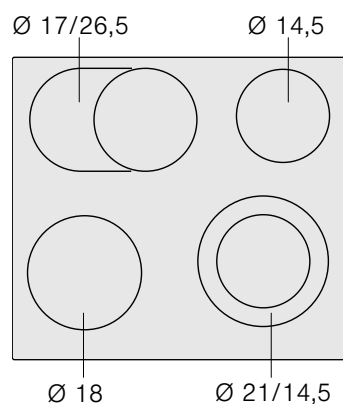

PKF65.F17., PKF67.F17.

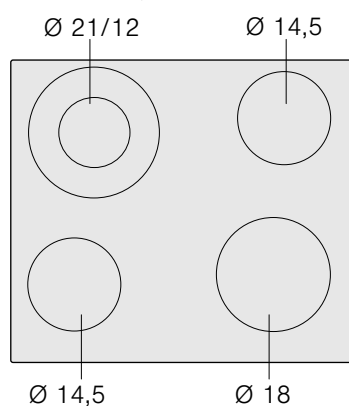


Table of contents

	Intended use	4
	Important safety information	4
	Causes of damage	5
	Overview	5
	Environmental protection	5
	Energy-saving tips	5
	Environmentally-friendly disposal	5
	Getting to know your appliance	6
	The control panel	6
	The hotplates	6
	Residual heat indicator	6
	Operating the appliance	7
	Switching the hob on and off	7
	Setting a hotplate	7
	Table of cooking times	7
	Electronic boil start control	8
	Setting the electronic boil start control	8
	Table of cooking times for electronic boil start control	8
	Tips for the electronic boil start control	9
	Childproof lock	9
	Switching the childproof lock on and off	9
	Automatic childproof lock	9
	Time-setting options	9
	Automatic hotplate switch-off	9
	Automatic timer	10
	Kitchen timer	10
	Automatic safety cut-out	10
	Wipe protection	10
	Energy consumption indicator	10
	Basic settings	11
	Changing the basic settings	11
	Cleaning	11
	Ceramic	11
	Hob surround	12
	Trouble shooting	12
	E-report in the displays	12

	Customer service	13
	E number and FD number	13
	Test dishes	13

Additional information on products, accessories, replacement parts and services can be found at **www.bosch-home.com** and in the online shop **www.bosch-eshop.com**

Intended use

Read these instructions carefully. Please keep the instruction and installation manual, as well as the appliance certificate, in a safe place for later use or for subsequent owners.

Check the appliance for damage after unpacking it. Do not connect the appliance if it has been damaged in transport.

Only a licensed professional may connect appliances without plugs. Damage caused by incorrect connection is not covered under warranty.

This appliance is intended for private domestic use and the household environment only. The appliance must only be used for the preparation of food and beverages. The cooking process must be supervised. A short cooking process must be supervised without interruption. Only use the appliance in enclosed spaces.

This appliance is intended for use up to a maximum height of 2000 metres above sea level.

This appliance may be used by children over the age of 8 years old and by persons with reduced physical, sensory or mental capabilities or by persons with a lack of experience or knowledge if they are supervised or are instructed by a person responsible for their safety how to use the appliance safely and have understood the associated hazards.

Children must not play with, on, or around the appliance. Children must not clean the appliance or carry out general maintenance unless they are at least 15 years old and are being supervised.

Keep children below the age of 8 years old at a safe distance from the appliance and power cable.

Important safety information

Warning – Risk of fire!

- Hot oil and fat can ignite very quickly. Never leave hot fat or oil unattended. Never use water to put out burning oil or fat. Switch off the hotplate. Extinguish flames carefully using a lid, fire blanket or something similar.
- The hotplates become very hot. Never place combustible items on the hob. Never place objects on the hob.
- The appliance gets hot. Do not keep combustible objects or aerosol cans in drawers directly underneath the hob.
- The hob switches off automatically and can no longer be operated. It may switch on unintentionally at a later point. Switch off the circuit breaker in the fuse box. Contact the after-sales service.
- Do not use hob covers here. They can cause accidents, for example due to overheating, catching fire or materials shattering.

Warning – Risk of burns!

- The hotplates and surrounding area (particularly the hob surround, if fitted) become very hot. Never touch the hot surfaces. Keep children at a safe distance.
- The hotplate heats up but the display does not work. Switch off the circuit breaker in the fuse box. Contact the after-sales service.
- It is only allowed to use safety devices, e.g. hob guards, which have been approved by ourselves. Unsuitable safety devices or hob guards may result in accidents.

Warning – Risk of electric shock!

- Incorrect repairs are dangerous. Repairs may only be carried out and damaged power cables replaced by one of our trained after-sales technicians. If the appliance is defective, unplug the appliance from the mains or switch off the circuit breaker in the fuse box. Contact the after-sales service.
- Do not use any high-pressure cleaners or steam cleaners, which can result in an electric shock.

- A defective appliance may cause electric shock. Never switch on a defective appliance. Unplug the appliance from the mains or switch off the circuit breaker in the fuse box. Contact the after-sales service.
- Cracks or fractures in the glass ceramic may cause electric shocks. Switch off the circuit breaker in the fuse box. Contact the after-sales service.

Warning – Risk of injury!

Saucepans may suddenly jump due to liquid between the pan base and the hotplate. Always keep the hotplate and saucepan bases dry.

Causes of damage

Caution!

- Rough pot and pan bases scratch the ceramic.
- Avoid boiling pots dry. This may cause damage.
- Never place hot pots or pans on the control panel, the display area or the surround. This may cause damage.
- Damage can occur if hard or pointed objects fall on the hob.
- Aluminium foil and plastic containers melt on hot hotplates. Oven protective foil is not suitable for your hob.

Overview

You will find the most frequently caused damage in the following table.

Damage	Cause	Measure
Stains	Boiled over food	Remove boiled over food immediately with a glass scraper.
	Unsuitable cleaning agents	Only use cleaning agents that are suitable for glass ceramic.
Scratches	Salt, sugar and sand	Do not use the hob as a work surface or storage space.
	Rough pot and pan bases scratch the ceramic.	Check your cookware.
Discolouration	Unsuitable cleaning agents	Only use cleaning agents that are suitable for glass ceramic.
	Pan abrasion (e.g. aluminium)	Lift pots and pans when moving them.
Blisters	Sugar, food with a high sugar content	Remove boiled over food immediately with a glass scraper.

Environmental protection

In this section, you can find information about saving energy and disposing of the appliance.

Energy-saving tips

- Always place suitable lids on saucepans. When cooking without a lid, considerably more energy is required. A glass lid means that you can see inside without having to lift the lid.
- Use pots and pans with even bases. Uneven bases increase energy consumption.
- The diameter of pot and pan bases should be the same size as the hotplate. In particular, small saucepans on the hotplate cause energy losses. Please note: cookware manufacturers often indicate the upper diameter of the saucepan. This is usually bigger than the diameter of the base of the pan.
- Use a small saucepan for small quantities. A larger, less full saucepan requires a lot of energy.
- Cook with only a little water. This will save energy. Vitamins and minerals in vegetables are preserved.
- Always cover as large an area of the hotplate as possible with your saucepan.
- Switch to a lower heat setting in good time.
- Select a suitable ongoing cooking setting. You will waste energy by using an ongoing cooking setting which is too high.
- Use the residual heat of the hob. For longer cooking times, you can switch the hotplate off 5-10 minutes before the end of the cooking time.

Environmentally-friendly disposal


Dispose of packaging in an environmentally-friendly manner.



This appliance is labelled in accordance with European Directive 2012/19/EU concerning used electrical and electronic appliances (waste electrical and electronic equipment - WEEE). The guideline determines the framework for the return and recycling of used appliances as applicable throughout the EU.

The instruction manual is the same for various different hobs. You can find the hob dimensions in the overview of models. → *Page 2*

The control panel

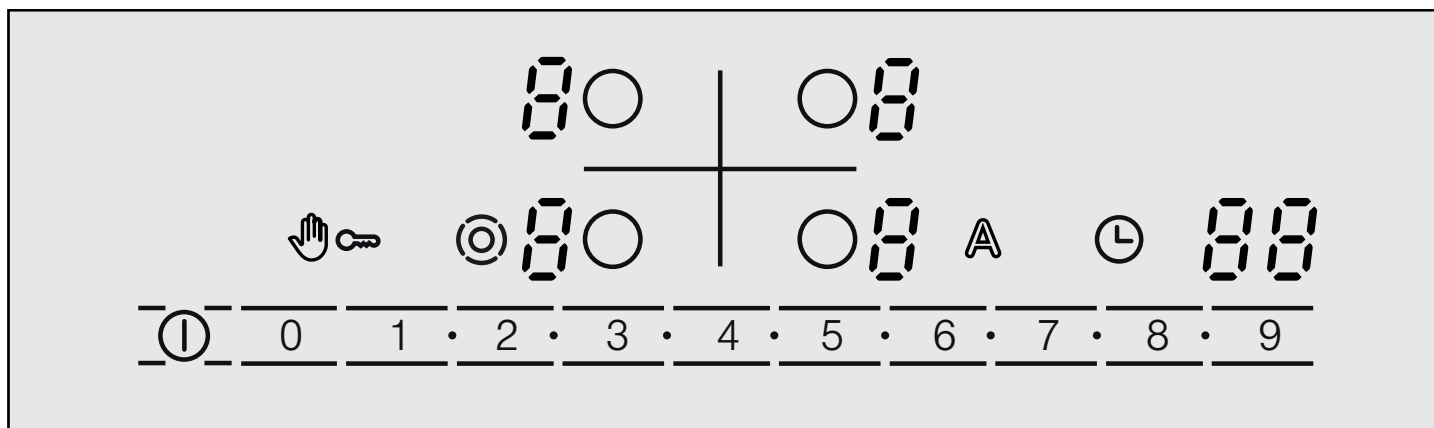

Displays	
<i>19</i>	Heat settings
<i>H/h</i>	Residual heat
<i>R</i>	Electronic boil start control
<i>88</i>	Timer

Controls	
①	Primary switch
 	Wipe protection/child safety lock
	Automatic zone control
	Hotplate selection
1●2●3●4●	Control panel
	Timer
	Electronic boil start control

Notes

- When you touch a symbol, the respective function is activated.
- Always keep the controls dry. Moisture reduces their effectiveness.
- Do not pull pans close to the displays and sensors. The electronics could overheat.

The hotplates

	Hotplate	Activating and deactivating
○	Single-circuit hotplate	
⦿	Dual-circuit hotplate	Select the hotplate and touch the ⦿ symbol

	Hotplate	Activating and deactivating
CO	Extended cooking zone	Select the hotplate and touch the  symbol

When the hotplate is activated, the corresponding display lights up
Switching on the hotplate: the previously set size is automatically
selected.

Notes

- Any dark areas in the glow pattern of the hotplate are due to technical reasons. The function of the hotplate is not affected.
- Hotplate temperature is regulated by the heat switching on and off. The heat may also switch on and off at the highest setting. This ensures e.g.:
 - sensitive components are protected from overheating
 - the appliance is protected from electrical overload
 - better cooking results are achieved
- With multi-circuit hotplates the heater elements of the inner filament circuits and the heater element of the activations may switch on and off at different times.

Residual heat indicator

The hob has a two-stage residual heat indicator for each hotplate.

If H appears in the display the hob is still hot. It may be used, for example, to keep a small meal warm or to melt cooking chocolate. As the hotplate cools down further, the display changes to h . The display remains lit until the hotplate has cooled sufficiently.

Operating the appliance

In this section, you can find out how to set the hotplates. The table shows heat settings and cooking times for various meals.

Switching the hob on and off

The main switch is used to switch the hob on and off.

To switch on: touch the ① symbol. A signal sounds. The display light above the main switch and the  indicators light up. The hob is ready for use.

To switch off: Touch the ① symbol until the display light above the main switch and the displays go out. All hotplates are switched off. The residual heat indicator remains on until the hotplates have cooled down sufficiently.

Notes

- The hob will switch itself off automatically once all hotplates have been switched off for a while (10-60 seconds).
- The settings remain stored for 4 seconds after the hob has been switched off. If you switch it on again during this time, the hob will operate using the previously stored settings.

Setting a hotplate

Set the desired heat setting on the control panel.

Heat setting 1 = lowest setting


Heat setting 9 = highest setting

Every heat setting has an intermediate setting. This is marked in the control panel with the • symbol.

Setting the heat setting

The hob must be switched on.

1. Touch the ○ symbol to select the hotplate.
 lights up in the heat setting display,  lights up under the heat setting display.
2. Select the required heat setting in the control panel.

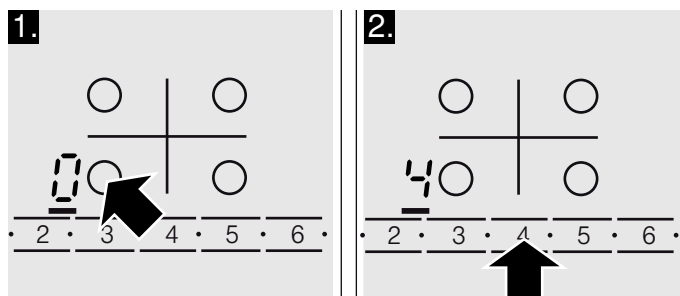

Changing the heat setting

Select the hotplate and set the desired heat setting in the control panel.

Switching off the hotplate

Use the ○ symbol to select the hotplate. Set the control panel to 0. After about 10 seconds, the residual heat indicator appears.

Note: The last selected hotplate remains activated. You can set the hotplate without selecting it again.

Table of cooking times

The following table provides some examples.

Cooking times and heat settings may vary depending on the type of food, its weight and quality. Deviations are therefore possible.

For bringing liquids to the boil, use heat setting 9.

Stir thick liquids occasionally.

Food that needs to be seared quickly or food which loses a lot of liquid during initial frying is best seared in several small portions.

Tips for energy-saving cooking can be found in the Environmental protection section. → Page 5

	Ongoing cooking setting	Ongoing cooking time in minutes
Melting		
Chocolate coating	1-1.	-
Butter, honey, gelatine	1-2	-
Heating and keeping warm		
Stew (e.g. lentil stew)	1-2	-
Milk**	1.-2.	-
Heating sausages in water**	3-4	-
Defrosting and heating		
Frozen spinach	2.-3.	10-20 min
Frozen goulash	2.-3.	20-30 min
Poaching, simmering		
Dumplings	4.-5.*	20-30 min
Fish	4-5*	10-15 min
White sauces, e.g. béchamel sauce	1-2	3-6 min
Whisked sauces, e.g. sauce Béarnaise, hollandaise	3-4	8-12 min
Boiling, steaming, braising		
Rice (with double the quantity of water)	2-3	15-30 min
Rice pudding	1.-2.	35-45 min
Unpeeled boiled potatoes	4-5	25-30 min
Boiled potatoes	4-5	15-25 min
Pasta, noodles	6-7*	6-10 min
Stew, soups	3.-4.	15-60 min
Vegetables	2.-3.	10-20 min
Frozen vegetables	3.-4.	10-20 min
Cooking in a pressure cooker	4-5	-

* Ongoing cooking without a lid

** Without lid

*** Turn frequently

	Ongoing cooking setting	Ongoing cooking time in minutes
Braising		
Roulades	4-5	50-60 min
Pot roast	4-5	60-100 min
Goulash	2-3.	50-60 min
Frying with little oil**		
Escalope, plain or breaded	6-7	6-10 min
Escalope, frozen	6-7	8-12 min
Chop, plain or breaded***	6-7	8-12 min
Steak (3 cm thick)	7-8	8-12 min
Hamburger, rissoles (3 cm thick)***	4-5.	30-40 min
Poultry breast (2 cm thick)***	5-6	10-20 min
Poultry breast, frozen***	5-6	10-30 min
Fish and fish fillet, plain	5-6	8-20 min
Fish and fish fillet, breaded	6-7	8-20 min
Fish and fish fillet, breaded and frozen, e.g. fish fingers	6-7	8-12 min
Scampi and prawns	7-8	4-10 min
Sautéing vegetables, fresh mushrooms	7-8	10-20 min
Vegetables, meat in Asian-style strips	7-8.	15-20 min
Stir fry, frozen	6-7	6-10 min
Pancakes	6-7	consecutively
Omelette	3-4.	consecutively
Fried eggs	5-6	3-6 min
Deep-fat frying (150-200 g per portion continuously in 1-2 litres oil**)		
Frozen products, e.g. chips, chicken nuggets	8-9	-
Croquettes, frozen	7-8	-
Meat, e.g. chicken portions	6-7	-
Fish, breaded or battered	5-6	-
Vegetables, mushrooms, breaded or battered, tempura	5-6	-
Small baked items, e.g. ring doughnuts/jam-filled doughnuts, fruit in batter	4-5	-

* Ongoing cooking without a lid
 ** Without lid
 *** Turn frequently



Electronic boil start control

The electronic boil start control heats the hotplate using the highest heat setting and then switches down to the simmer setting you have selected.

The time taken for the hotplate to heat up depends on the simmer setting selected.

Setting the electronic boil start control

The electronic boil start control can only be activated in the first 30 seconds after you have switched on the hotplate:

1. Set the desired ongoing cooking setting for the hotplate.
2. Touch the  symbol.

The electronic boil start control is activated.  and the ongoing cooking setting flash alternately in the display.

After the food has been brought to the boil, only the ongoing cooking setting remains lit on the display.

Switching off

Select the hotplate and touch the  symbol again.

Table of cooking times for electronic boil start control

The table below shows which dishes electronic boil start control can be used for.

The smaller quantities indicated are for the smaller hotplates and the larger quantities are for the larger hotplates. The values given are guidelines.

Stir thick liquids occasionally.

Dish with electronic boil start control	Amount	Heat setting	Total cooking time in minutes
Warming			
stock	500 ml - 1 litre	A 7-8	4-7 min
Thick soups	500 ml - 1 litre	A 2-3	3-6 min
Milk**	200-400 ml	A 1-2	4-7 min
Heating and keeping warm			
Stew (e.g. lentil stew)	400-800 g	A 1-2	-
Defrosting and heating			
Frozen spinach	300-600 g	A 2-3.	10-20 min
Frozen goulash	500 g - 1 kg	A 2-3.	20-30 min
Poaching			
Fish	300-600 g	A 4-5*	20-25 min

* Ongoing cooking without a lid
 ** Without lid

Dish with electronic boil start control	Amount	Heat setting	Total cooking time in minutes
Cooking			
Rice (with double the quantity of water)	125-250 g	A 2-3	20-25 min
Unpeeled boiled potatoes with 1-3 cups of water	750 g - 1.5 kg	A 4-5	30-40 min
Boiled potatoes with 1-3 cups of water	750 g - 1.5 kg	A 4-5	20-30 min
Vegetables with 1-3 cups of water	500 g - 1 kg	A 2-3	15-20 min
Frozen vegetables with 1-3 cups of water	500 g - 1 kg	A 4-5	15-20 min
Braising			
Roulades	x 4	A 4-5	50-60 min
Pot roast	1 kg	A 4-5	80-100 min
Frying**			
Escalope, plain or breaded	1-2	A 6-7	8-12 min
Cutlet, plain or breaded	1-2	A 6-7	8-12 min
Steak (3 cm thick)	1-2	A 7-8	8-12 min
Fish and fish fillet breaded	1-2	A 6-7	8-12 min
Fish and fish fillet, breaded and frozen, e.g. fish fingers	200-300 g	A 6-7	8-12 min
Pancakes		A 6-7	continuous frying
* Ongoing cooking without a lid			
** Without lid			

Tips for the electronic boil start control

Electronic boil start control is designed to conserve food's nutritional value while using little water for cooking.

- Add only approximately 3 cups of water to the food for large hotplates and approximately 2 cups of water for small hotplates.
- Place a lid on the saucepan.
- Electronic boil start control is not suitable for food that is cooked in a large volume of water (e.g. pasta).

Childproof lock

You can use the childproof lock to prevent children from switching on the hob.

Switching the childproof lock on and off

The hob must be switched off.

To switch on: touch the  symbol for approx. 4 seconds. The display light above the  symbol lights up for 10 seconds. The hob is locked.

To switch off: touch the  symbol for approx. 4 seconds. The lock is released.

Automatic childproof lock

This function automatically activates the childproof lock every time you switch the hob off.

Switching on and off

Find out how to switch the automatic childproof lock on and off in the Basic settings section. → Page 11

Time-setting options

There are 2 different time-setting options:

- A hotplate should switch off automatically
- Kitchen timer


Automatic hotplate switch-off

Enter a cooking time for the relevant hotplate. When the cooking time has elapsed, the hotplate switches off automatically.

Setting the cooking time

The hotplate must be selected and set.

1. Touch the  symbol. The I→I display for the hotplate lights up. 00 lights up on the timer display.
2. Within the next 10 seconds, set the desired cooking time on the control panel.

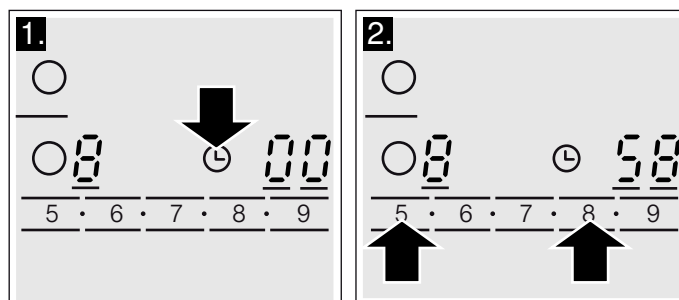

The cooking time counts down. If you have set a cooking time for more than one hotplate, the cooking time of the selected hotplate is always displayed.

When the time has elapsed

When the cooking time has elapsed, the hotplate switches off. You will hear an audible signal and **00** lights up in the display for 10 seconds. The **I→I** display lights up brightly. Touch any symbol. The displays go out and the audible signal ceases.

Changing or cancelling the cooking time

Select the hotplate and touch the **⌚** symbol. The **I→I** display lights up brightly. Change the cooking time or set to **00** in the settings range.

Note: You can set a cooking time of up to 99 minutes.

Automatic timer

You can use this function to preselect a cooking time for all hotplates. Each time a hotplate is switched on, the pre-selected cooking time then counts down. When the cooking time has elapsed, the hotplate switches off automatically.

You can find out how to switch on the automatic timer in the Basic settings section. → *Page 11*

Note: You can change the cooking time for a hotplate or switch off the automatic timer for the hotplates. Select the hotplate and touch the **⌚** symbol. The desired **I→I** display lights up brightly. Change the cooking time or set to **00** in the settings range.

Kitchen timer

You can use the kitchen timer to set a time of up to 99 minutes. It runs independently of all the other settings.

Switching on the kitchen timer

You can switch the kitchen timer on in 2 different ways:

- If a hotplate has been selected, touch the **⌚** symbol twice within 10 seconds.
- If a hotplate has not been selected, touch the **⌚** symbol.

The **⌚** display lights up.

Setting the kitchen timer

Set the desired time in the control panel.

After the time has elapsed

After the time has elapsed, you will hear a beep. **00** lights up in the timer display. The **⌚** display for the kitchen timer lights up brightly. The display switches off after 10 seconds.

Displaying the time

Use the **⌚** symbol to select the kitchen timer. The time is displayed for 10 seconds.

Setting the correct time

Use the **⌚** symbol to select the kitchen timer and reset the time.

Automatic safety cut-out

If a hotplate has been switched on for a long time without the setting being changed, the automatic time limit is activated.

The hotplate stops heating. **FB** and the **H/h** residual heat indicator flash alternately on the hotplate display.

The display goes out when you touch any control. You can make new settings.

When the time limit is activated depends on the heat setting selected (1 to 10 hours).

Wipe protection

If you wipe over the control panel while the hob is switched on, settings may be changed.

To prevent this from happening, your hob has a wipe protection function. Touch the **👉** symbol. A beep goes off and the display light above the **👉** symbol lights up. The control panel is locked for 30 seconds. You can now wipe over the control panel without changing any settings.


Note: The primary switch is not affected by the wipe protection function. You can switch off the hob at any time.

Energy consumption indicator

You can use this function to display the total energy consumption between switching the hob on and off.

Once switched off, the energy consumption is displayed in kilowatt hours (e.g. 1.08 kWh) for 10 seconds

The accuracy on the display depends on the voltage quality of the power supply, among other factors.

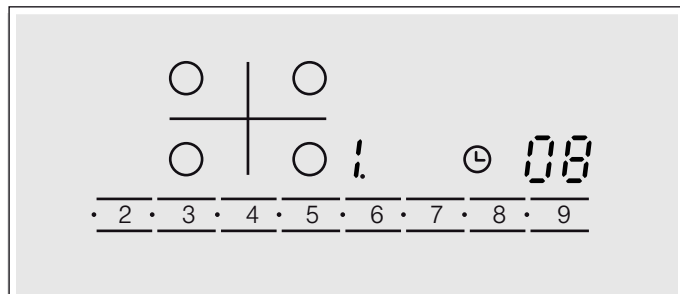

The display has not been activated. You can find out how to activate the display in the Basic settings section. → *Page 11*

Basic settings

Your appliance has various basic settings. You can adjust these settings to meet your own needs.


Display	Function
c 1	Automatic child safety lock
0	Switched off.*
1	Switched on.
2	Manual and automatic child safety lock switched off.
c 2	Beep
0	Confirmation signal and operation error signal are switched off (primary switch signal always remains).
1	Only the operation error signal is switched on.
2	Only the confirmation signal is switched on.
3	Confirmation signal and operation error signal switched on.*
c 3	Energy consumption display (Ask your electric company what the mains voltage is)
0	Consumption display switched off.*
1	Consumption display with mains voltage at 230 V.
2	Consumption display with mains voltage at 400 V.
3	Consumption display with mains voltage at 220 V.
4	Consumption display with mains voltage at 240 V.
c 5	Automatic timer
00	Switched off.*
0 1:59	Cooking time after which the hotplates switch off.
c 6	Duration of the timer end signal
1	10 seconds.*
2	30 seconds
3	1 minute.
c 7	Activation of the heating elements
0	Switched off.
1	Switched on.
2	Last setting before the hotplate was switched off.*
c 9	Selected time for the hotplate
0	Unlimited: the most recently selected hotplate can always be adjusted without having to select it again.*
1	Once you select a hotplate, you have 10 seconds to adjust it, after which you will have to select it again in order to be able to adjust it.
c 0	Reset the basic settings
0	Switched off.*
1	Switched on.

*Basic setting

Changing the basic settings


The hob must be switched off.

1. Switch on the hob.
2. Within the next 10 seconds touch the ☹ symbol for 4 seconds.

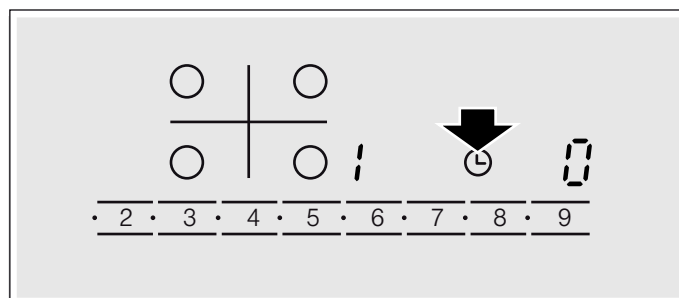

c and 1 flash alternately in the left-hand display; 0 lights up in the right-hand display.

3. Touch the ☹ symbol repeatedly until the required display appears in the left-hand display.
4. Set the desired value on the control panel.

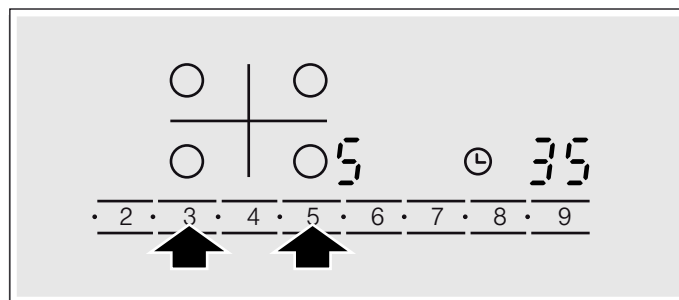

5. Touch the ☹ symbol for 4 seconds. The setting is activated.

Switching off

To exit the basic setting, switch off the hob with the main switch and make new settings.

Cleaning

Suitable maintenance and cleaning products can be purchased from the after-sales service or in our e-Shop.

Ceramic

Clean the hob after each use. This will prevent spills from burning onto the ceramic.

Only clean the hob when it has cooled down sufficiently.

Use only cleaning agents which are suitable for glass ceramic. Follow the cleaning instructions on the packaging.

Never use:

- Undiluted washing-up liquid
- Detergent intended for dishwashers
- Scouring agents

- Harsh cleaning agents such as oven spray or stain remover
- Abrasive sponges
- High-pressure cleaners or steam jet cleaners

Ground-in dirt can be best removed with a glass scraper, available from retailers. Please note the manufacturer's instructions.

You can also obtain a suitable glass scraper from our after-sales service or from the e-Shop.

Using special sponges to clean glass ceramic achieves great cleaning results.

Hob surround

To prevent damage to the hob surround, observe the following instructions:

- Use only hot soapy water.
- Wash new sponge cloths thoroughly before use.
- Do not use any sharp or abrasive agents.
- Do not use the glass scraper.

? Trouble shooting

Faults often have simple explanations. Please read the notes in the table before calling the after-sales service. The electronics of your hob are underneath the control panel. For various reasons, the temperature in this area may rise sharply.

In order that the electronics do not overheat, the hotplates are switched off as and when necessary. The **F2**, **F4**, or **F5** display appears alternately with the **H** or **h** residual heat indicator.

Display	Fault	Measure
None	The power supply has been disconnected.	Check the household fuse for the appliance. Check whether there is a power cut by trying other electronic appliances.
All displays flash	The touch control is wet or an object is resting on it.	Dry the control or remove the object.
F2	Several hotplates have been used over a prolonged period at high power settings. To protect the electronics, the hotplate has been switched off.	Wait a while. Touch any touch control. When F2 goes out, the electronics have cooled down sufficiently. You can continue cooking.
F4	Despite the switch-off by F2 , the electronics have become hot again. All hotplates have therefore been switched off.	Wait a while. Touch any touch control. When F4 goes out, you can continue cooking.
F5 and the heat setting flash alternately. An audible signal can be heard	Warning: There is a hot pan in the area of the control panel. There is a risk that the electronics will overheat.	Remove the pan. The fault display goes out shortly afterwards. You can continue cooking.
F5 and audible signal	There is a hot pan in the area of the control panel. To protect the electronics, the hotplate has been switched off.	Remove the pan. Wait a while. Touch any control. When F5 goes out, you can continue cooking.
F8	The hotplate was in operation for too long and has switched itself off.	You can switch the hotplate back on again immediately.
dE The hotplates do not heat up	Demo mode is switched on	Switching off the demo mode: Disconnect the appliance for 30 seconds from the power supply (switch off the household fuse or the circuit breaker in the fuse box). Touch any touch control after 3 minutes. The demo mode is switched off.

E-report in the displays

When an error message with "E" appears in the display, e.g. E0111, switch the appliance off and on again.

If it was a one-off error, the display goes out. If the error message appears again, call the after-sales service and quote the exact error message.

Customer service

Our after-sales service is there for you if your appliance needs to be repaired. We will always find an appropriate solution, also in order to avoid after-sales personnel having to make unnecessary visits.

E number and FD number

Please quote the E-number (product number) and the FD number (production number) of your appliance when contacting the after-sales service. The rating plate bearing these numbers can be found on the appliance certificate.

Please note that a visit from an after-sales service engineer is not free of charge in the event of misuse of the appliance, even during the warranty period.

Please find the contact data of all countries in the enclosed customer service list.

To book an engineer visit and product advice

GB 0344 892 8979
Calls charged at local or mobile rate.
IE 01450 2655
0.03 € per minute at peak. Off peak 0.0088 € per minute.

Rely on the professionalism of the manufacturer. You can therefore be sure that the repair is carried out by trained service technicians who carry original spare parts for your appliances.

Test dishes

This table has been produced for test institutes to facilitate the testing of our appliances.

The data in the table refers to our accessory cookware from Schulte Ufer (4-part induction pot set HEZ 390042) with the following dimensions:

- Saucepan dia. 16 cm, 1.2 litres, for 14.5 cm dia. single-circuit hotplate

- Cooking pot dia. 16 cm, 1.7 litres, for 14.5 cm dia. single-circuit hotplate
- Cooking pot dia. 22 cm, 4.2 litres, for 18 cm dia. or 17 cm dia. hotplate
- Frying pan dia. 24 cm, for 18 cm dia. or 17 cm dia. hotplate

Test dishes	Heating up/bringing to boil		Ongoing cooking		
	Heat setting	Cooking time (min:sec)	Lid	Ongoing cooking setting	Lid
Melting chocolate					
Cookware: saucepan					
Chocolate couverture (e.g. Dr. Oetker dark chocolate, 150 g) on 14.5 cm dia. hotplate	-	-	-	1.	No
Heating and keeping lentil stew warm					
Cookware: cooking pot					
Lentil stew made to DIN 44550					
Initial temperature 20° C					
Amount: 450 g for 14.5 cm dia. hotplate	9	approx. 2:00 without stirring	Yes	1.	Yes
Amount: 800 g for 18 cm dia. or 17 cm dia. hotplate	9	approx. 2:00 without stirring	Yes	1.	Yes
Lentil stew from the tin					
e.g. lentils with Erasco sausages:					
Initial temperature 20° C					
Amount 500 g for 14.5 cm dia. hotplate	9	approx. 2:00 (Stir after approx. 1:30)	Yes	1.	Yes
Amount: 1000 g for 18 cm dia. or 17 cm dia. hotplate	9	approx. 2:30 (Stir after approx. 1:30)	Yes	1.	Yes

Test dishes	Heating up/bringing to boil		Ongoing cooking		
	Heat setting	Cooking time (min:sec)	Lid	Ongoing cooking setting	Lid
Simmering Béchamel sauce					
Cookware: saucepan					
Milk temperature: 7° C					
Recipe: 40 g butter, 40 g flour, 0.5 l milk (3.5% fat content) and one pinch of salt for 14.5 cm dia. hotplate	9 ²	approx. 5:20	No	1 ^{1, 3}	No
				¹ Melt the butter, stir in the flour and salt, and keep cooking the roux for 3 minutes	
		² Add the milk to the roux and bring to the boil, stirring continuously			
				³ After the Béchamel sauce has come to the boil, keep cooking it at setting 1 for a further 2 minutes, stirring all the time	
Cooking rice pudding - Ongoing cooking with lid					
Cookware: cooking pot					
Milk temperature: 7° C					
Recipe: 190 g round grain rice, 90 g sugar, 750 ml milk (3.5% fat content) and 1 g salt for 14.5 cm dia. hotplate	9	approx. 6:45 Heat the milk until it starts to rise up. Switch down to the ongoing cooking setting and add the rice, sugar and salt to the milk Total cooking time (incl. bringing to boil) approx. 45 minutes	No	2	Yes
				Stir the rice pudding after 10 minutes	
Recipe: 250 g round grain rice, 120 g sugar, 1 l milk (3.5% fat content) and 1.5 g salt for 18 cm dia. or 17 cm dia. hotplate	9	approx. 7:20 Heat the milk until it starts to rise up. Switch down to the ongoing cooking setting and add the rice, sugar and salt to the milk Total cooking time (incl. bringing to boil) approx. 45 minutes	No	2	Yes
				Stir the rice pudding after 10 minutes	
Cooking rice pudding - Ongoing cooking without lid					
Cookware: cooking pot					
Milk temperature: 7° C					
Recipe: 190 g round grain rice, 90 g sugar, 750 ml milk (3.5% fat content) and 1 g salt for 14.5 cm dia. hotplate	9	approx. 7:30 Add rice, sugar and salt to the milk and heat the mixture up, stirring continuously. At a milk temperature of approx. 90°C switch down to the ongoing cooking setting. Simmer for approx. 50 minutes	No	2	No

Test dishes	Heating up/bringing to boil		Ongoing cooking		
	Heat setting	Cooking time (min:sec)	Lid	Ongoing cooking setting	Lid
Recipe: 250 g round grain rice, 120 g sugar, 1 l milk (3.5% fat content) and 1.5 g salt for 18 cm dia. or 17 cm dia. hotplate	9	approx. 8:00 Add rice, sugar and salt to the milk and heat the mixture up, stirring continuously. At a milk temperature of approx. 90°C switch down to the ongoing cooking setting. Simmer for approx. 50 minutes	No	2	No

Cooking rice

Cookware: cooking pot					
Water temperature 20° C					
Recipe acc. to DIN 44550:					
125 g long grain rice, 300 g water and a pinch of salt for 14.5 cm dia. hotplate	9	approx. 2:48	Yes	2	Yes
Recipe acc. to DIN 44550:					
250 g long grain rice, 600 g water and a pinch of salt for 18 cm dia. or 17 cm dia. hotplate	9	approx. 3:15	Yes	2.	Yes

Frying pork loin chops

Cookware: frying pan					
Initial temperature loin chops: 7° C					
Amount: 3 loin chops (total weight approx. 300 g, about 1 cm thick) 15 g sunflower oil for 18 cm dia. or 17 cm dia. hotplate	9	approx. 2:40	No	7	No

Frying pancakes

Cookware: frying pan					
Recipe acc. to DIN EN 60350-2					
Amount: 55 ml batter per pancake for 18 cm dia. or 17 cm dia. hotplate	9	approx. 2:40	No	6 or 6. depending on browning level	No

Deep-fat frying frozen chips

Cookware: cooking pot					
Amount: 1.8 kg sunflower oil, per portion: 200 g frozen chips (e.g. McCain 123 Original fries) for 18 cm dia. or 17 cm dia. hotplate	9	Until oil temperature reaches 180 °C	No	9	No

If the tests are carried out with an 18 cm dia. hotplate with a power rating of 1500 W, the boiling time is increased by approx. 20% and the ongoing cooking setting by one ongoing cooking setting.



Thank you for buying a Bosch Home Appliance!

Register your new device on MyBosch now and profit directly from:

- **Expert tips & tricks for your appliance**
- **Warranty extension options**
- **Discounts for accessories & spare-parts**
- **Digital manual and all appliance data at hand**
- **Easy access to Bosch Home Appliances Service**

Free and easy registration – also on mobile phones:

www.bosch-home.com/welcome



Looking for help? You'll find it here.

Expert advice for your Bosch home appliances, need help with problems or a repair from Bosch experts.

Find out everything about the many ways Bosch can support you:

www.bosch-home.com/service

Contact data of all countries are listed in the attached service directory.

Robert Bosch Hausgeräte GmbH

Carl-Wery-Straße 34

81739 München

Germany

www.bosch-home.com



9001243760

980727