



11 of 56

Turn the control knob to select the required function. Press the knob to confirm the selection.

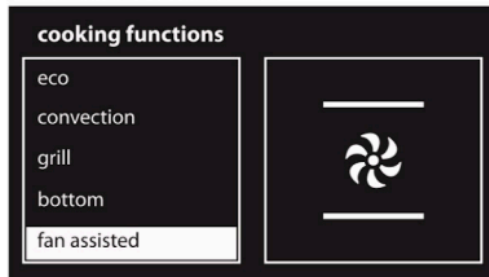

3. The appliance will begin automatic preheating. The display will show the chosen function, the pre-set temperature, the current time and the progress bar of the temperature reached (preheating).

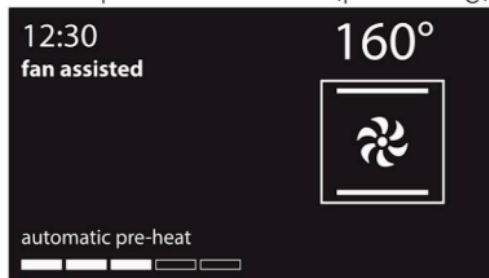

Turn the control knob to change the preset temperature at any time. Press to confirm or wait 5 seconds.



It is not recommended to place the dish in the oven during the automatic pre-heat stage.

4. When the preheating stage is over a buzzer will sound to indicate that the food can be placed inside the oven.



Interrupting a function

Press the return knob to interrupt a cooking function. Select the required option and confirm it using the return knob.



Keep the control knob pressed in for at least 5 seconds to immediately interrupt cooking at any time and return to the main menu.

INDUCTION HOB

Turn on any element by pressing the power on/off symbol. Press the illuminated bars to select the heat level. B means booster - it will bring a pot to the boil very quickly.

Important: induction works like a magnet. You need to place the pot on the hob for it to work. If there's nothing on the element it won't heat up. It will just flash then turn itself off.